

# Calibre 3035

Ø28.50mm  
Ht: 6.35mm  
Train: 28.800

- Automatic
- Calendar
- Centre Seconds
- Shock Proof
- 27 Jewels

## Base Calibre 3035

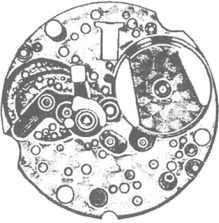




Image	Rolex No.	Description
	5000	Main plate
	5001	Barrel bridge
	5002	Train wheel bridge
	5003	Minute pinion bridge
	5004	Pallet bridge

 










 

 



Image	Rolex No.	Description
	5005	Balance bridge
	5006	Winding bridge
	5007	Barrel arbor
	5008	Barrel with arbor
	5009	Mainspring, strength standard
	5010	Mainspring, strength weak
	5011	Minute pinion with cannon pinion
 	5012	Great wheel
 	5013	Third wheel
 	5014	Second wheel
 	5015	Escape wheel
	5016	Pallet fork
	5017	Pallet staff
	5019	Balance with Breguet hairspring, timed


















Image	Rolex No.	Description
	5020	Balance staff
	5021	Roller
	5022	Spring for balance stop
	5023	Small plate for stud holder
	5024	Stud support
	5025	Winding stem
	5026	Winding pinion
	5027	Sliding pinion
	5028	Crown wheel
	5029	Crown wheel core
	5030	Friction spring for crown wheel
	5031	Intermediate crown wheel
	5032	Wig-wag pinion
	5033	Ratchet wheel
	5034	Click
	5035	Spring for click
	5036	Setting lever











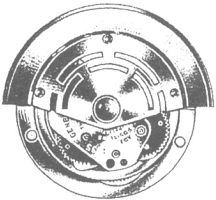

Image	Rolex No.	Description
	5037	Spring for setting lever
	5038	Jumper for setting lever, mounted
	5039	Yoke for sliding pinion
	5040	Yoke stud
	5041	Spring for yoke
	5042	Setting wheel
	5043	Minute wheel
	5044	Stud for minute wheel
	5045	Cannon pinion
	5046	Hour wheel with double tothing
	5060	Automatic device module
	5061	Automatic device upper bridge

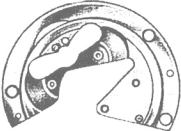
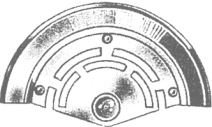








Image	Rolex No.	Description
	5062	Automatic device framework
	5063	Oscillating weight
	5064	Axle for oscillating weight
	5065	Pinion for oscillating weight
	5066	Spring-clip for oscillating weight: • 0.135mm
	5066-1	• 0.150mm
	5066-2	• 0.165mm
	5066-3	• 0.180mm
	5067	Reversing wheel, only
	5068	Reversing wheel, mounted
	5069	Driving wheel for ratchet wheel
	5090	Yoke for cam
	5091	Spring for cam yoke


Image	Rolex No.	Description
	5092	Stud for cam
	5093	Calendar wheel nut
	5094	Date wheel, mounted
	5095	Date jumper
	5096	Date corrector
	5097	Corrector wheel
	5098	Date indicator seating
	5099-1	Date indicator champagne
	5099-2	silvered
	5100	Stud for date indicator seating
	55000	Set of screws














Image	Rolex No.	Description
	55001	Screw for: • Barrel bridge • Train wheel bridge
	55003	Screw for: • Minute pinion • Pallet bridge • Setting lever jumper • Date indicator seating
	55005	Screw for: • Balance bridge • Automatic device framework
	55005-1	Regulating screw for balance bridge
	55006	Screw for: • Winding bridge • Automatic device upper bridge
	55019	Screw Microstella, low head
	55019-1	Screw Microstella, high head
	55023	Screw for small plate for stud holder
	55028	Screw for crown wheel
	55033	Screw for ratchet wheel
	55034	Screw for click
	55037	Screw for setting lever spring
	55051	Screw for stud


























Image	Rolex No.	Description
	55052	Screw for dial
	55053	Screw for case
	55095	Screw for date jumper
	55097	Screw for corrector wheel
	95008	Bush for barrel-upper
	95008-1	Bush for barrel-lower
	95011	In-setting for minute pinion
	95011-1	Bush for minute pinion-lower
	95012	Jewel for great wheel-upper / lower
	95013	Jewel for third wheel-upper /lower
	95015	In setting for escape wheel-upper /lower
	95015-1	Cap jewel for escape wheel-upper /lower
	95015-2	Spring for in setting for escape wheel-upper /lower
	95016	Jewel for pallet fork-upper /lower



Image	Rolex No.	Description
	95019	Shock-absorber for balance-upper
	95019-1	Shock-absorber for balance-lower
	95019-2	In setting for balance-upper / lower
	95019-3	Cap jewel for balance-upper / lower
	95019-4	Spring for in-setting for balance-upper / lower
	95063	In-setting for oscillating weight-upper
	95063-1	In-setting for oscillating weight-lower
	95067	Jewel for reversing wheel-upper / lower
	95069	Jewel for driving wheel for ratchet wheel-upper / lower
	95090	Jewel for yoke for cam
	95098	Roller for date indicator seating