

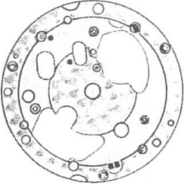























	N	English
	3135-410	Escape wheel
	3135-419	Pallet staff
	3135-421	Pallet fork
	3135-429	Balance staff
	3135-432	Balance with Breguet hairspring, timed
	3135-450	Stud support
	3135-451	Bridle for stud support
	3135-510	Driving wheel for ratchet wheel
	3135-540	Reversing wheel, mounted
	3135-550	Pinion for oscillating weight
		Spring-clip for oscillating weight:
	3135-560-1	• 0.18mm
	3135-560-2	• 0.160mm
	3135-560-3	• 0.200mm
	3135-561	Bridle for spring-clip

	N°	English
	3135-568	Axle for oscillating weight
	3135-570	Oscillating weight
	3135-600	Date indicator seating
	3135-614	Date jumper
	3135-623	Date finger
	3135-625	Date wheel, mounted
	3135-633	Yoke for cam
	3135-635	Cam yoke spring
	3135-639	Intermediate date corrector wheel

	N°	English
	3135-645	Date corrector
	3135-670	Intermediate date wheel
	3135-5000	Set of screws
	3135-5013	Dial screw
	3135-5044	Minute wheel stud
	3135-5100	Screw for case
	3135-5110	Screw for: <ul style="list-style-type: none"> • Balance guard • Balance bridge • Winding bridge • Automatic device lower bridge • Automatic device bridge, upper • Barrel bridge • Train wheel bridge
	3135-5115	Screw for: <ul style="list-style-type: none"> • Bridle of spring-clip • Bridle for stud holder • Click • Setting-lever spring • Setting-lever jumper • Minute pinion bridge • Pallet bridge • Mechanism cover

	N°	English
	3135-5120	Regulating nut for balance bridge height adjustment
	3135-5210	Screw for: • Crown wheel • Ratchet wheel
	3135-5213	Screw for intermediate crown wheel
	3135-5452	Screw for hairspring clamp
	3135-5600	Screw for date indicator seating
	3135-5625	Screw for date wheel
	3135-7115	Tapped foot for pallet bridge
	3135-7120	Tapped foot of balance bridge
	3135-7240	Yoke stud
	3135-7250	Setting-wheel ring
	3135-7600	Foot for date indicator seating
	3135-7625	Tapped foot for date wheel

	N°	English
	3135-7635	Stud for came yoke spring
	3135-9310	Jewel for barrel arbor-upper
	3135-9311	Jewel for barrel arbor-lower
	3135-9319	Bush for minute pinion-lower
	3135-9330	Jewel for great wheel-upper /lower
	3135-9335	In-setting for minute pinion-upper
	3135-9340	Jewel for third wheel-upper /lower
	3135-9360	Jewel for second wheel-upper
	3135-9421	Jewel for pallet fork-upper /lower
	3135-9510	Jewel for driving wheel for ratchet wheel support
	3135-9511	Jewel for driving wheel for ratchet wheel-lower
	3135-9570	Jewel for oscillating weight-upper
	3135-9571	Jewel for oscillating weight-lower
	3135-9633	Jewel for cam yoke

	N°	English
	3135-9670	Jewel for intermediate date wheel-upper /lower
		Date indicator,
	3135-16100	champagne
	3135-16101	• champagne, arabic/persian
	3135-16102	• champagne, chinese
	3135-16103	• champagne, persian
	3135-16104	• champagne, modern chinese
		Date indicator,
	3135-16200	• white
	3135-16201	• white, arabic/persian
	3135-16202	• white, chinese
	3135-16203	• white, persian
	3135-16204	• white, modern chinese
	3135-16205	• white, red numbers
	3135-16206	• white, even numbers black, odd numbers red
	3135-16500	• pink
	3186-432	Balance with PARACHROM Breguet hairspring, timed Depends on model reference, see R20