

Calibre 2130

Ø20.00mm
Ht: 5.40mm
Train: 28.800

- Automatic
- Centre Seconds
- Shock Proof
- 29 Jewels

Base Calibre 2130










Image	Rolex No.	Description
	137	Bridle
	167	Screw for bridle
	4493	Cap jewel for balance-upper / lower
	4494	Spring for in-setting for escape wheel and balance-upper / lower
	5044	Stud for minute wheel
	55034	Screw for click
	2130-100	Main plate
	2130-105	Barrel bridge
	2130-110	Train wheel bridge






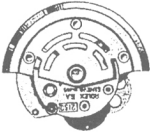







Image	Rolex No.	Description
	2130-115	Pallet bridge
	2130-120	Balance bridge
	2130-125	Minute pinion bridge
	2130-135	Automatic device lower bridge
	2130-140	Automatic device upper bridge
	2130-145	Automatic device module
	2130-201	Winding stem
	2130-204	Winding pinion
	2130-205	Sliding pinion
	2130-210	Crown wheel
	2130-211	Crown wheel core
	2130-212	Core for intermediate crown wheel
	2130-213	Intermediate crown wheel



Image	Rolex No.	Description
	2130-217	Yoke for sliding gear
	2130-220	Setting lever
	2130-225	Spring for setting lever
	2130-230	Jumper for setting lever
	2130-236	Cover mechanism
	2130-240	Yoke for sliding pinion
	2130-241	Spring for yoke
	2130-245	Spring for balance stop
	2130-246	Stud for balance stop spring
	2130-251	Intermediate setting wheel
 	2130-260	Minute wheel
	2130-270	Cannon pinion ht. 1.98mm
	2130-270-1	Cannon pinion ht. 1.68mm
 	2130-280	Hour wheel ht. 1.29mm
 	2130-280-1	Hour wheel ht. 1.00mm
	2130-300	Click

Image	Rolex No.	Description
	2130-301	Spring for click
	2130-305	Ratchet wheel
	2130-307	Barrel arbor
	2130-310	Barrel with arbor
	2130-311	Mainspring, strength standard
	2130-311-1	Mainspring, strength weak
 	2130-330	Great wheel
	2130-335	Minute pinion with cannon pinion
 	2130-340	Third wheel
 	2130-360	Second wheel
 	2130-410	Escape wheel
	2130-419	Pallet staff
	2130-421	Pallet fork



















Image	Rolex No.	Description
 	2130-425	Roller
	2130-429	Balance staff
	2130-432	Balance with flat hairspring, timed
	2130-451	Bridle for hairspring support
	2130-452	Clamp for hairspring
	2130-453	Hairspring support
 	2130-510	Driving wheel for ratchet wheel
 	2130-540	Reversing wheel, mounted
 	2130-550	Pinion for oscillating weight
	2130-560-1	Spring-clip for oscillating weight: • 0.15mm
	2130-560-2	• 0.135mm
	2130-560-3	• 0.165mm
	2130-561	Bridle for spring-clip
 	2130-568	Axle for oscillating weight
	2130-570	Oscillating weight














Image	Rolex No.	Description
	2130-5210	Screw for crown wheel
	2130-5213	Screw for intermediate crown wheel
	2130-5220	Setting lever axle screw (yellow)
	2130-5236	Screw for: • Cover mechanism • Bridge for spring-clip • Bridge for hairspring support
	2130-5452	Screw for hairspring bridge
	2130-7240	Yoke stud
	2130-9307	Jewel for barrel-upper / lower
	2130-9330	Jewel for: • Great wheel-upper / lower • Driving wheel for ratchet wheel-upper • Reversing wheel-upper / lower • Oscillating weight-lower
	2130-9340	Jewel for: • Third wheel-upper / lower • Second wheel-upper
	2130-9360	Jewel for second wheel-lower
	2130-9421	Jewel for pallet fork-upper / lower
	2130-9510	Jewel for driving wheel for ratchet wheel-lower
	2130-9570	Jewel for oscillating weight-upper

Image	Rolex No.	Description
	2130-975	Enlargement ring
	2130-0913	In-setting for escape wheel-upper /lower
	2130-0913-2	Cap jewel for escape wheel-upper /lower
	2130-0915	Shock-absorber for balance-upper
	2130-0915-1	In-setting for balance-upper / lower
	2130-0916	Shock-absorber for balance-lower
	2130-5000	Set of screws
	2130-5100	Screw for case
	2130-5105	Screw for barrel bridge, long
	2130-5110	Screw for: <ul style="list-style-type: none"> • Barrel bridge • Train wheel bridge • Balance bridge • Automatic device upper bridge
	2130-5115	Screw for: <ul style="list-style-type: none"> • Pallet bridge • Minute pinion bridge • Automatic device lower bridge • Spring for setting lever • Jumper for setting lever
	2130-5121	Regulating screw for balance bridge